
OSV Our Sunday Visitor


2025 VBS TRUE NORTH ASSEMBLY INSTRUCTIONS

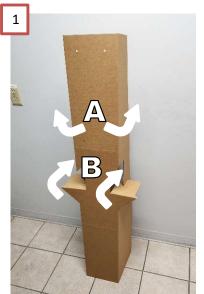

Unfold the Easel. A) Fold both sides back 90°. B) Fold down wings and lock into corresponding slots.



Align the four bolt holes of the Background with the holes in the Easel. Attach the Background to the Easel using four bolts. Bolts will go through both layers and the wingnuts will screw onto the back side to tighten.

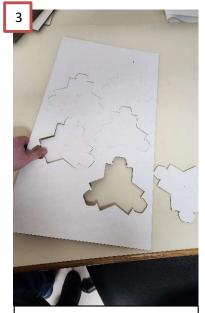


Punch out the six plain 3-sided connectors.




Attach four of the 3-sided connectors to the back side of the Bear foreground piece using one bolt each. Retain the other 3-sided connectors to be used later.




Unpack the light strip and battery pack from bag. Insert 3 AA batteries in battery pack. Attach one side of Velcro pad to battery pack cover.

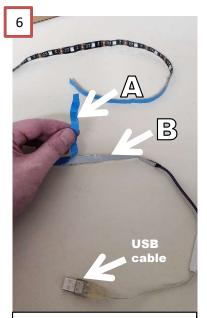

Unwind and remove light strip from spool. A) Remove blue backing from light strip. B) White adhesive will remain on light strip.

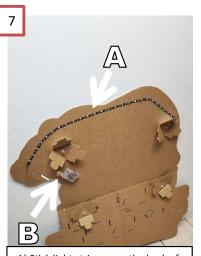

A) Stick light strip across the back of the Bear roughly 2 inches from the top, avoid interfering with other pieces. B) Attach other side of Velcro pad to Bear near the USB cable end of light strip leaving room for the battery pack to be attached. Attach battery pack with Velcro and plug USB cable into battery pack.

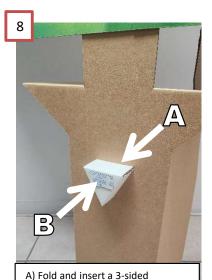

connector into the slots on the lower front of easel.
B) Locate 2 inch piece of twin stick tape, peel away backing on one side, and apply tape across the front of this connector. The hole on the connector may be covered.

OSV Our Sunday Visitor

Our Sunday Visitor ASSEMBLY INSTRUCTIONS



Attach the Bear to the Background by folding over flaps of the 3-sided connectors, align tabs with corresponding slots, and push tabs through to snap into place.



Punch out letter 'O' and attach remaining 3-sided connector to its back side using a bolt. Punch out remaining letters.



Connect all four places to Background using process in previous step.



Attached letters to display by folding over flaps and inserting tabs into corresponding slots spelling 'TRUE NORTH'.



Gently lift back the lower part of the Bear foreground. Remove the backing on the twin stick tape on the connector underneath. Press down on the Bear foreground over the tape so it sticks and foreground lays evenly.



Finished display.



Use power switch on battery pack to turn on/off the light sequence.